


Maxlok® 1921



For installation information please refer to the tooling overview and manuals on our website www.avdel-global.com.
 Pour les conditions de pose, merci de vous référer à la description de l'outil et aux manuels disponibles sur notre site Web.
 Angaben zur Verarbeitung entnehmen Sie bitte der Geräteübersicht und den Betriebsanleitungen auf unserer Website.
 Per informazioni sull'installazione preghiamo consultare i manuali e la panoramica degli attrezzi sul nostro sito web.
 Para ver información sobre máquinas de colocación, consulte nuestra página web, apartados visión general de máquinas y manuales.

English	Français	Deutsch	Italiano	Español
Brazier head	Tête plate	Flachrundkopf	Testa tonda	Cabeza alomada
Pin: Aluminium alloy* Polished	Tige: Alliage d'aluminium* Poli	Bolzen: Aluminium* Poliert	Bullone: Lega di alluminio* Lucido	Vástago: Aluminio* Pulido
Collar: Aluminium alloy* Natural	Bague: Alliage d'aluminium* Brut	Schließring: Aluminium* Blank	Collare: Lega di alluminio* Nessuna finitura	Collar: Aluminio* Natural

*: EN AW-7075, AlZn5.5MgCu **: EN AW-6061, AlMg1SiCu

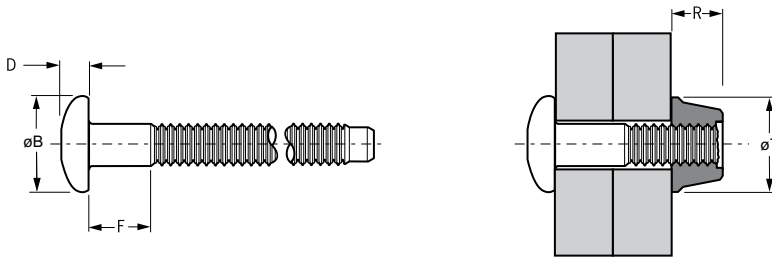

ø	[Cross-section diagram]		[Thread diagram]	øB	D	F	R	øT	[Pin strength diagram]	[Collar strength diagram]	Part No/ref	Part No/ref
	min.	max.										
4.8 (3/16")	1.6	15.9	5.16	10.0	3.4	2.3	7.9	9.9	4.23	5.78	01921-00610	01985-00600
	7.9	31.7				8.4					01921-00620	
6.4 (1/4")	1.6	15.9	6.75	13.3	4.2	2.2	11.1	13.0	7.45	9.79	01921-00810	01985-00800
	7.9	31.7				9.1					01921-00820	

all dimensions in mm / en millimètre / alle Maße in mm / in millimetri / en milímetros

1) typical values / valeurs moyennes / typische Werte / Valori tipici / resistencias máximas recomendadas